


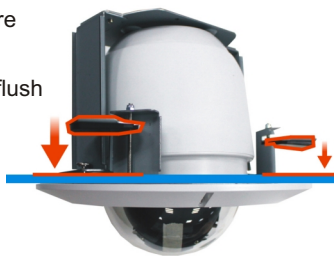

NOTE: Please make sure the Wings of the T-Bar Bracket are completely flush with the ceiling board.



STEP10

Put the Power Cable and Ethernet Cable down through the center hole of the T-bar and connect it to the Camera.

STEP 11


Put up the installed T-Bar Bottom Mount with Camera into the ceiling opening.



5

STEP 12

Tighten the screws to fix T-Bar Bottom Mount on the T-Bar Bracket.

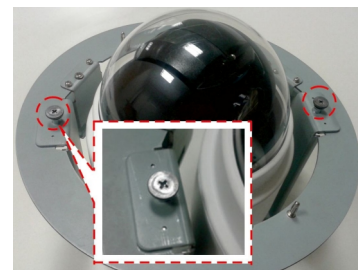

STEP 13

Fix the Trim Ring to the T-Bar Bracket.



6

Communicate via *Micro network*



Micronet
Making Communication Easier

Quick Installation Guide

In-Ceiling (T-Bar) Mount Kit

Model No.: C5234

V1.0



Here lists the items and tools needed to mount the Speed Dome Camera into the ceilings.

Package Contents

- Lock Bar x1
- M3x6 Screw x2
- Ceiling Sticker x1
- Trim Ring x1
- Indoor base x1

Items Needed

- Speed Dome Camera
- Power Cable
- Ethernet Cable
- T-Bar
- Ceiling Sticker (equipped with T-Bar)

Tools Needed

- Tool for cutting a circle on the ceiling
- (+,-) Screw Driver

Follow the steps to install the Dome Camera with T-Bar Ceiling mount accessory for in-ceiling mounting.

1


STEP 4

Install the Camera on the fixed Hard Ceiling Mount by turning the Camera clockwise. Then tighten the screw at the side of the Fixing Plate.




STEP 5

Tighten the screw at the side of the Fixing Plate. Finishes install Camera on T-Bar Bottom Mount.

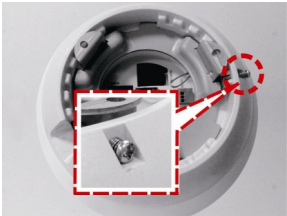

STEP 6

Place the Ceiling Sticker on the ceiling plate, and cut the circle part out of the ceiling.

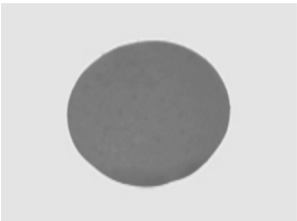

3

STEP 1

Remove the outdoor sunshield by removing the screws on the top.



STEP 2

Follow by removing the outdoor base by removing the screws on the top



STEP 3

After the outdoor base is removed carefully replace it with the indoor base



And then tighten the screws on the top



2


STEP 7

Disassemble the wings from the In-Ceiling (T-Bar) Mount by loosening three screws counterclockwise (indicated in the diagram). Loosen the screws till the wings are loosened enough and turn out from the ring. (as shown in the second diagram)

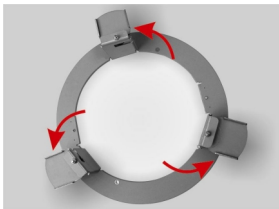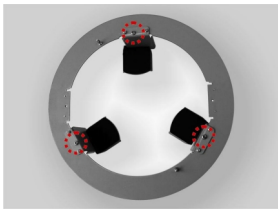


STEP 8

Put up the T-Bar Bracket into the ceiling opening and fix the In-Ceiling (T-Bar) Mount on the ceiling by tightening three screws clockwise.

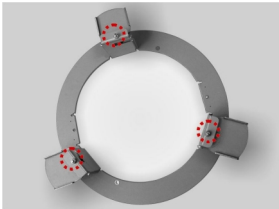

STEP 9

When screwing, the Wings will get approached to the ceiling board until it is completely flush with the board.

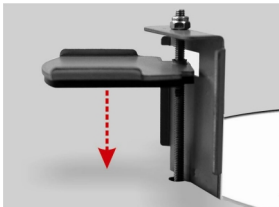

4